

The error code 04 is usually caused by a faulty wiring connection or coin selector failure. Please try to check its wiring or even replace coin selector. If it is still out of order, please provide some pictures about the coin selector and its wiring for our clear understanding of what kind of selector is installed.

Every time an error code is displayed on the machine, the error code will be memorized by the PCB and alarms after booting for the operator to notice an error occurred. That is called "error memory". As the error memory alarms, pressing the FREE PLAY button will allow it to stop alarming but it won't work on regular error code alarming. There is somewhat different alarming between error memory and regular error. The frequency of alarming buzz for coin memory is a little quicker than regular error code alarming, please check it and you can confirm it.