


1. Remove the 2 screws and the cover.


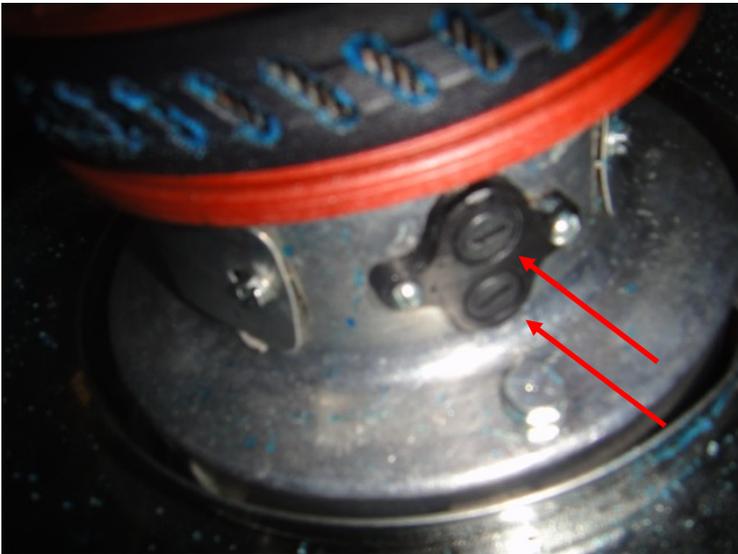


2. Loosen 4 black nuts and then remove them to take brushes out of bracket.







Heater Replacement

3. Remove the screw and now the heater is able to be removed from bracket.

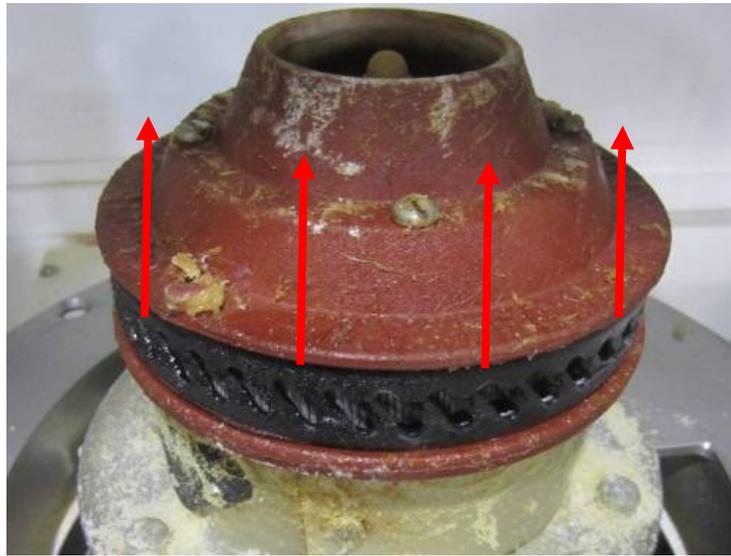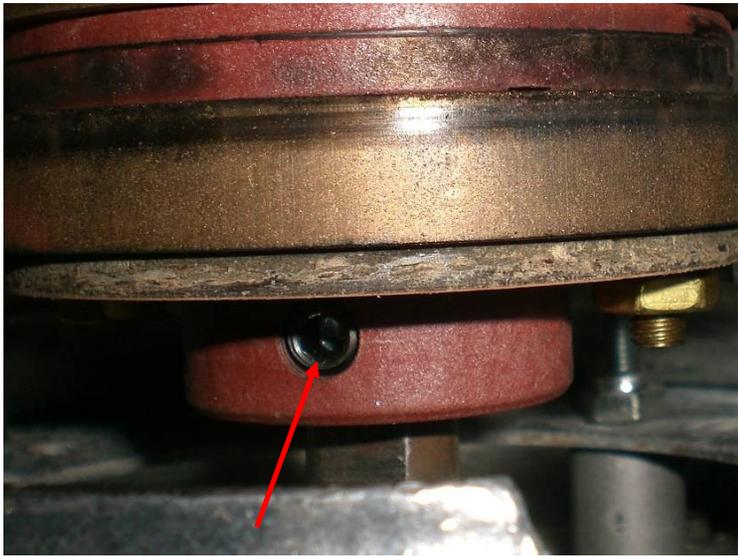

※ When installing the heater, make sure the 4 brushes fixed on brass tracks or it may cause the heater to get shorted and damaged.

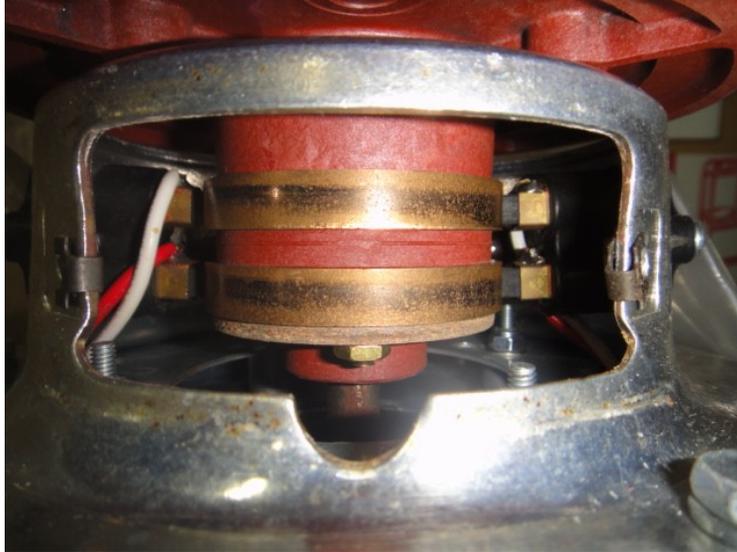

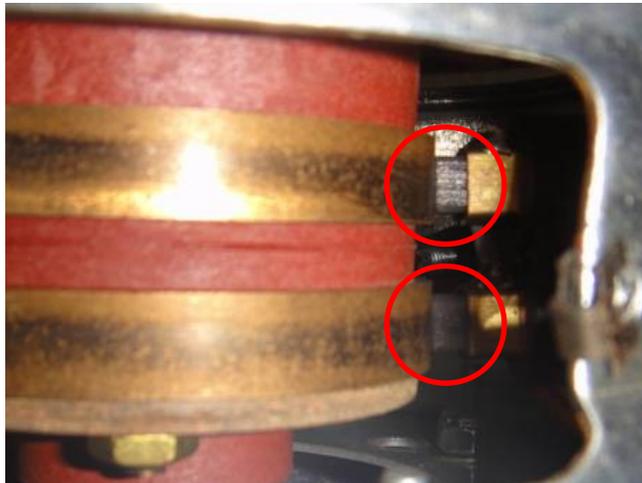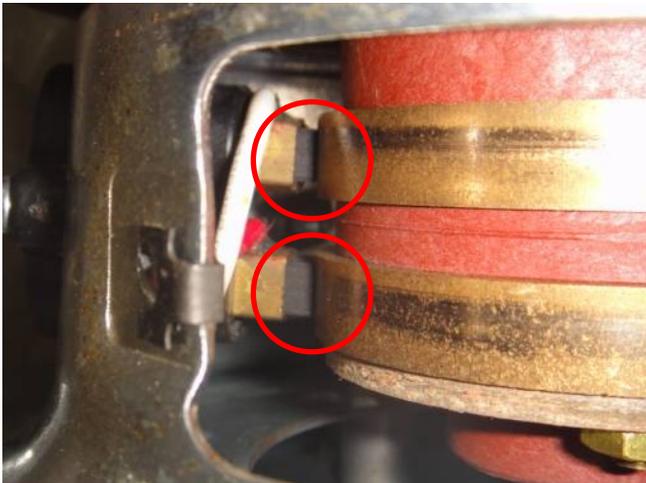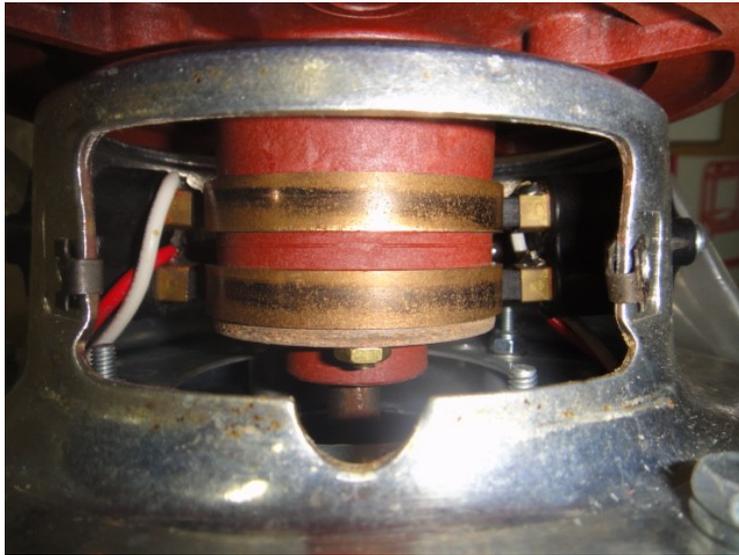

Heater Replacement