

As the spin head keeps spinning, does the machine allow you to vend normally or fail to do anything? Does it set off an alarm with error code error code?

If it works normally when spin head keeps spinning, please turn off DIPSW 3-1 to disable DEHUMIDITY function.

