

Enter to Vend Door Flaps test mode:

- (1) Keep pressing TEST button and then reboot the machine.
- (2) When it shows "33" on display, release the button.
- (3) Press TEST button until it shows "03" on display. (03 is the test mode for Vend Door Flaps)
- (4) Now press FREE PLAY button to activate the mechanism.
- (5) The motor will run to make flaps in vend chamber opened and then pause for few seconds.
- (6) Motor will run again to make flaps return to its original position and then stop.

There are some problems which may cause error 03:

1. If the motor didn't run when you teste it in the mode, it's probably caused by motor or drive board failure.

- (1) Try to switch drive board from other one as pictured below and then test it again.

If it works, it is obviously caused by drive board failure.

- (2) If it isn't working properly, the motor is failed.

